



# FRAME MEASUREMENTS FOR FRAME BAGS

**FIT  
FUNCTION  
FORM**

# FRONT TRIANGLE INSIDE DIMENSIONS



	Size	A (mm)	B (mm)	C (mm)	D (mm)	E (°)	F (°)	G (°)	H (°)
Strael 2.0/3.0	51R	464	486	580	19	79.1	56.1	102.9	121.9
	51T	440	477	576	49	82.0	56.0	100.5	121.5
	54R	459	499	587	39	78.6	57.1	102.4	121.9
	54T	463	490	587	69	81.9	56.7	99.6	121.8
	56R	472	514	596	49	78.1	58.0	101.4	122.5
	56T	484	502	593	89	81.4	57.5	99.1	122.0
	58R	492	528	605	69	78.1	59.0	101.4	121.5
	58T	503	516	603	109	81.4	58.6	99.1	120.9
	61R	506	541	614	84	78.1	60.0	101.4	120.5
	61T	515	538	618	124	81.5	60.1	99.0	119.4
Secan 1.0/2.0/2.5	51R	415	481	589	9	82.3	54.7	101.2	121.8
	51T	421	478	590	40	85.4	54.8	98.1	121.7
	54R	436	497	599	29	81.9	56.0	100.6	121.5
	54T	441	495	604	59	85.3	55.8	97.2	121.7
	56R	447	510	610	39	82.1	56.6	99.4	121.9
	56T	462	507	611	79	84.9	56.7	96.6	121.8
	58R	467	525	619	59	81.7	57.7	98.8	121.8
	58T	482	521	621	99	84.8	57.5	96.2	121.5
	61R	483	539	628	74	81.5	58.7	99.0	120.8
	61T	498	538	633	114	84.4	58.7	96.6	120.3
Faran 2.0/2.5	51R	440	490	599	2	79.8	54.2	102.7	123.3
	51T	443	485	599	30	82.7	54.2	99.8	123.3
	54R	461	502	608	20	79.7	54.9	102.3	123.1
	54T	466	498	609	52	82.8	55.0	99.2	123.0
	56R	476	518	617	36	79.2	56.3	102.3	122.2
	56T	486	512	617	73	82.2	56.3	99.3	122.2
	58R	495	535	627	53	78.8	57.6	101.7	121.9
	58T	507	530	626	92	81.7	57.5	98.8	122.0
	61R	509	549	636	68	78.9	58.5	101.6	121.0
	61T	519	545	640	108	82.3	58.5	98.7	120.5
Holt	S	303	543	678	3	100.6	53.2	86.1	120.1
	M	339	556	690	3	96.1	54.5	90.6	118.8
	L	385	574	704	10	91.7	56.0	95.0	117.3
	XL	436	599	722	30	88.1	57.6	98.6	115.7


# DOWNTUBE STRAP ZONES FOR FULL FRAME BAGS: STRAEL, SECAN & FARAN



Note: All measurements are along top of down tube from head tube end.

	Size	Area between A-B is ok for straps		Area between C-D is ok for straps		Area between E-F is ok for straps	
		A (mm)	B (mm)	C (mm)	D (mm)	E (mm)	F (mm)
Strael 2.0/3.0	51R	20	60	135	318	340	480
	51T	20	60	135	317	339	476
	54R	20	60	135	321	343	487
	54T	20	60	135	322	344	487
	56R	20	60	135	325	347	496
	56T	20	60	135	324	346	493
	58R	20	60	135	330	352	505
	58T	20	60	135	330	352	503
	61R	20	60	135	335	357	514
	61T	20	60	135	337	359	518
Secan 1.0/2.0/2.5	51R	20	60	135	323	345	489
	51T	20	60	135	324	346	490
	54R	20	60	135	328	350	499
	54T	20	60	135	330	352	504
	56R	20	60	135	333	355	510
	56T	20	60	135	333	355	511
	58R	20	60	135	338	360	519
	58T	20	60	135	339	361	521
	61R	20	60	135	342	364	528
	61T	20	60	135	345	367	533
Faran 2.0/2.5	51R	20	60	135	327	349	499
	51T	20	60	135	327	349	499
	54R	20	60	135	332	354	508
	54T	20	60	135	332	354	509
	56R	20	60	135	332	354	517
	56T	20	60	135	336	358	517
	58R	20	60	135	341	363	527
	58T	20	60	135	340	362	526
	61R	20	60	135	345	367	536
	61T	20	60	135	348	370	540

# DOWNTUBE STRAP ZONES FOR FULL FRAME BAGS: HOLT

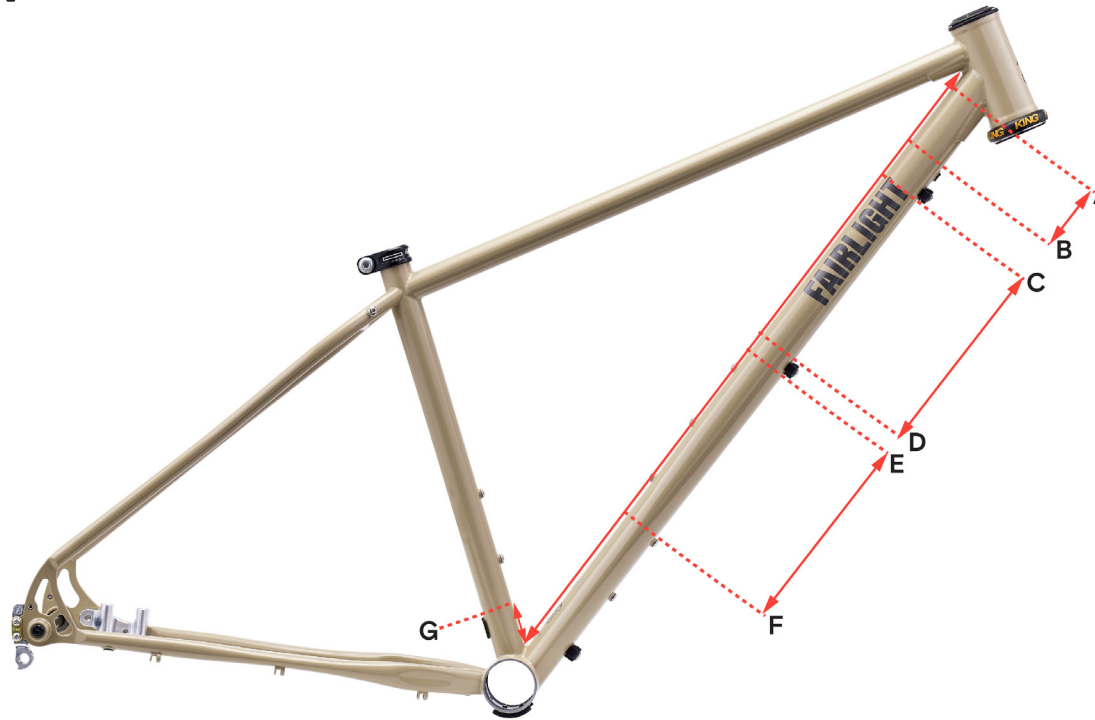

**Note:**

Measurements A-F are along the top of down tube from head tube end.

The area between F and the BB could be used for straps but depends on bottles/cages used.

Measurement G is along the inside of the downtube - to clear the dropper post port.

	Size	Area between A-B is ok for straps		Area between C-D is ok for straps		Area between E-F is ok for straps		G (mm)
		A (mm)	B (mm)	C (mm)	D (mm)	E (mm)	F (mm)	
Holt	S	20	85	125	368.5	388.5	504	40
	M	20	85	125	375	395	517	40
	L	20	85	125	382.7	402.7	532.4	40
	XL	20	85	125	392.2	412.2	551.4	40